


OWNER'S MANUAL

Model: TC-15-HP (5302027)

(15 Cubic Ft. Poly Trailer Cart)

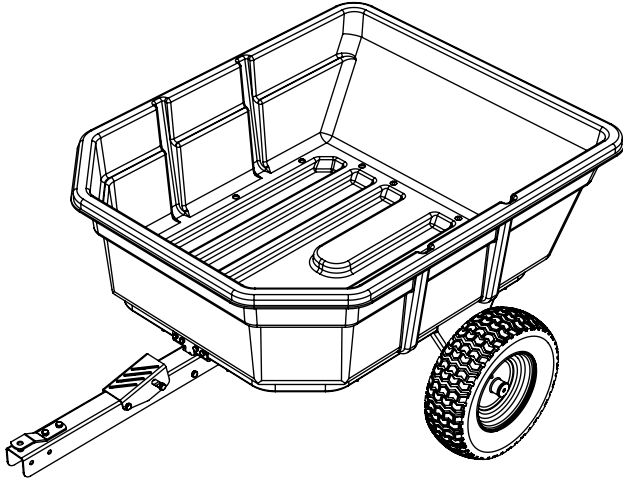

BEFORE RETURNING THIS PRODUCT
FOR ANY REASON, PLEASE CALL

1-800-831-0027

IF YOU SHOULD HAVE A QUESTION OR
EXPERIENCE A PROBLEM WITH YOUR
FIMCO INDUSTRIES PRODUCT:

1-800-831-0027

BEFORE YOU CALL, PLEASE HAVE THE
FOLLOWING INFORMATION AVAILABLE:
SALES RECEIPT & MODEL NUMBER. IN MOST
CASES, A FIMCO INDUSTRIES EMPLOYEE CAN
RESOLVE THE PROBLEM OVER THE PHONE.

General Information

Thank you for purchasing this product. The purpose of this manual is to assist you in operating and maintaining your trailer cart. Please read it carefully, as it furnishes information which will help you achieve years of trouble-free operation.

Warranty/Parts/Service

For home usage, products are warranted for one year from date of purchase against manufacturer or workmanship defects.

Commercial users have a 90 day warranty.

Your authorized dealer is the best source of replacement parts and service. To obtain prompt, efficient service, always remember to give the following information...

- Correct Part Description and/or part number.
- Model number/Serial number of your sprayer.

Part descriptions and part numbers can be obtained from the illustrated parts list section(s) of this manual.

Whenever you need parts or repair service, contact your distributor/dealer first. For warranty work, always take your original sales slip, or other evidence of purchase date, to your distributor/dealer.

Assembly

Most of your cart will be pre-assembled at the factory. Finish assembly by following the next steps:

- Bolt the hopper to the tubular frame, with the 12 truss head screws (Item 12). Secure to the frame with 5/16" whiz locknuts (Item 2).

- Bolt the tongue assembly (which should be pre-assembled) around the tubular frame directly under the hopper. This will 'sandwich' around the bolted-together tubes under the hopper. Use a 3/8" flatwasher under the bolt head as well as under the locknut at this position.

- Slide a machinery bushing (Item 8) onto the axle pin (Item 14).

- Slide the pin with the machinery bushing through the axle hole, feeding it from the outside of the wheel, towards the center of your cart.

- Place another machinery bushing over the pin, after fed through the wheel, then slide complete wheel/axle assembly into the axle receiver tube on the frame. Secure in place with the provided cotter pin.

(Repeat for other wheel)

Using Your Dump Cart

To Dump: Step on foot plate located in the middle of the tongue. Step and lean towards the rear of the cart. The cart will tilt back to the dump position.

To Return to Pulling Position: Push down on the front of the cart body until the latch engages and locks to the tow bar.

Your pulling vehicle's speed should be governed by the weight of the load. The heavier the load, the slower the speed for safe operation.



www.fimcoindustries.com

1000 FIMCO Lane, P.O. Box 1700, North Sioux City, SD 57049
Toll Free Phone: 800-831-0027 : Toll Free Fax: 800-494-0440

Form No. 2063 [5008338 (02/11)] Printed in the U.S.A.

Warning: Danger of Improper Use of Cart:

This unit is intended for use only with riding mowers or tractors. It is definitely NOT for highway use, being pulled at high speeds, or transporting passengers of any sort. Such use could result in injuries for which the manufacturer cannot be held responsible.

Check tire pressure at regular intervals. Proper inflation will prolong the life of the tires.

NOTE:

700 lbs. maximum capacity
 Approximate weight of (1 Cu. Ft.)
 Dirt: 150 lbs.
 Sand: 125 lbs.
 Gravel: 110 lbs.
 Max. Speed: 4 MPH

Please do not return this merchandise to the store. Call us and we will take care of any problem you may have with this product.

How to order parts:

When ordering parts, always give model number, part number, part description, and inspector number.

Returns can be sent to:

FIMCO Inc.
 1000 FIMCO Lane
 North Sioux City, SD 57049

Exploded View/Parts List: TC-15-HP (5302027)

Item No	Part Number	Qty	Description	List Price
1	5006092	3	3/8"-16 Hex Locknut	.25
2	5006307	16	5/16"-18 Hex Whiz (Flange) Locknut	.25
3	5016030	6	Flatwasher - 3/8"	.25
4	5021089	2	Wheel, 16 x 6.50-8, Turf Tread	34.95
5	5034082	4	H.H.C.S., 5/16"-18 x 2" (Full Thread)	.25
6	5034171	1	H.H.C.S., 3/8"-16 x 3 1/2" (Grade 5)	.48
7	5034326	2	H.H.C.S., 3/8"-16 x 3 1/4"	.52
8	5041094	4	Mach. Bush., 3/4" ID x 1 1/4" OD	.50
9	5083009	1	15 Cu. Ft. Poly Cart Hopper	
10	5090015	1	Dump Cart Latch	
11	5101230	2	Cotter Pin, 3/16" x 2"	.10
12	5117321	12	Truss Head Machine Screw 5/16"-18 x 2"	.25
13	5277348	1	Dump Cart Hitch Assembly	
13.1	5013638	1	Dump Cart Hitch	
13.2	5019138	2	Extension Spring	1.10
13.3	5023115	1	4 1/2" Link Arm	
13.4	5038722	1	10 Cu. Ft. Dump Cart Hitch	4.54
13.5	5041167	2	Flanged Bronze Bushing	
13.6	5090014	1	Foot Latch	
13.7	5092026	1	Foot Lever 60 degree	
13.8	5095267	1	Hitch Pivot Mount	
13.9	5006092	6	3/8"-16 Hex Locknut	.25
13.10	5006035	1	5/16"-18 Hex Locknut	.50
13.11	5016030	2	Flatwasher - 3/8"	.25
13.12	5034078	1	H.H.C.S., 3/8"-16 x 3"	.40
13.13	5034171	1	H.H.C.S., 3/8"-16 x 3 1/2" (Grade 5)	.48
13.14	5034326	1	H.H.C.S., 3/8"-16 x 3 1/4"	.52
13.15	5034099	2	H.H.C.S., 3/8"-16 x 3/4"	.50
13.16	5034154	1	H.H.C.S., 5/16"-18 x 5/8"	.25
13.17	5034079	1	H.H.C.S., 3/8"-16 x 1"	.25
14	5277349	2	3/4" Axle Pin Weldment	
15	5277350	1	ATV 15 cu ft. Frame Weldment (L.H.)	
16	5277351	1	ATV 15 cu ft. Frame Weldment (R.H.)	

(List Prices are Subject to Change)

